



# User Manual

**MiVue™ C300**

---

# Table of Contents

---

Precautions and notices .....	3
Getting to know the recorder .....	3
Inserting a memory card .....	5
Formatting a card .....	6
Using your recorder in a vehicle .....	6
Operating basics.....	7
Setting the date and time .....	8
Recording in driving mode.....	8
Continuous recording .....	8
Event recording .....	9
Capture mode.....	9
Playback mode.....	10
File management.....	11
Protecting files.....	11
Deleting files.....	12
Customising the settings.....	12
Caring for your device.....	14
Regulatory information.....	15
CE .....	15
WEEE.....	16
Safety precautions.....	16

---

 
About charging.....	16
About the charger .....	16
About the battery.....	17

---

## Precautions and notices

- For your own safety, do not operate the controls of the product while driving.
- A window mount is needed when using the recorder in a car. Make sure that you place the recorder in an appropriate place, so as not to obstruct the driver's view or deployment of airbags.
- Make sure that no object is blocking the camera lens and no reflective material appears near the lens. Please keep the lens clean.
- If the car's windscreen is tinted with a coating, it may impact the recording quality.

## Getting to know the recorder

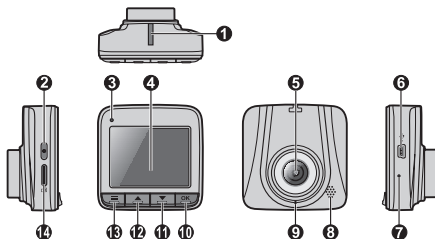

	Name	Description
❶	Device mount socket	For mounting the device.

	Name	Description
②	<b>Power key</b>	<ul style="list-style-type: none"> <li>▪ Press briefly to turn on the device; press and hold to turn off the device.</li> <li>▪ When the device is on and not recording: press briefly and repeatedly to cycle through the operation mode: video &gt; capture &gt; playback.</li> </ul>
③	<b>Status indicator</b>	<ul style="list-style-type: none"> <li>▪ Glows in red when charging is in progress. (The indicator will be off when the device is fully charged.)</li> <li>▪ Flashes in green when recording is in progress.</li> <li>▪ Glows in green when the device is turned on.</li> </ul>
④	<b>LCD screen</b>	Displays the output of your device.
⑤	<b>Camera lens</b>	Make sure that no object is blocking the camera lens and no reflective material appears near the lens.
⑥	<b>Mini-USB connector</b>	Connects to the charger.
⑦	<b>Shutdown switch</b>	Turns off the device.
⑧	<b>Speaker</b>	Outputs audio.
⑨	<b>Microphone</b>	Receives sounds.
⑩	<b>OK key</b>	<ul style="list-style-type: none"> <li>▪ Starts or stops recording.</li> <li>▪ Acts as the ENTER button.</li> </ul>
⑪	<b>Down key</b>	<ul style="list-style-type: none"> <li>▪ Moves to the next item.</li> <li>▪ Zooms out of the image.</li> </ul>
⑫	<b>Up key</b>	<ul style="list-style-type: none"> <li>▪ Moves to the previous item.</li> <li>▪ Zooms in the image.</li> </ul>

---

	Name	Description
13	Menu key	<ul style="list-style-type: none"><li>Opens the settings menu when not recording.</li><li>Returns to the previous screen.</li><li>Changes the speed (1X, 2X, 4X, 8X) during video playback.</li></ul>
14	Memory card slot	Data is recorded to a MicroSD card.


## Inserting a memory card

 **CAUTION:** Do not apply pressure to the centre of the memory card.

You have to insert a memory card before you can start recording. Your device supports Class 10 memory cards with up to 32 GB capacity.

Hold the card (MicroSD) by the edges and gently insert it into the slot as shown in the illustration.

To remove a card, gently push the top edge of the card inwards to release it, and pull it out of the slot.






**Note:** Before you start recording, please format the MicroSD card to avoid malfunction caused by files not created by MiVue. You can format the card on your computer or on MiVue.

**Note:** MiTAC does not guarantee the product's compatibility with MicroSD cards from all manufacturers.

---

## Formatting a card

If you need to format a memory card (all data will be erased):

1. When not recording, press  twice to open the **Setup** menu.
2. Select **Format** and press .
3. Select **Yes** and press .

## Using your recorder in a vehicle

 
### CAUTION:

- Select an appropriate location for mounting the device in a vehicle. Never place the device where the driver's field of vision is blocked.
- DO NOT insert or remove the memory card when operating the recorder.

To ensure the optimal recording angle, pay attention to the following:

1. Make sure that your car is parked on a level ground.
2. When adjusting the angle of mounting, make sure that the camera's view is parallel with the level ground, and the ground/sky ratio is close to 6/4.

Use cable clips to secure the power cord so that it does not interfere with driving. To ensure the highest quality recordings, you are advised to place the recorder near the rear view mirror.

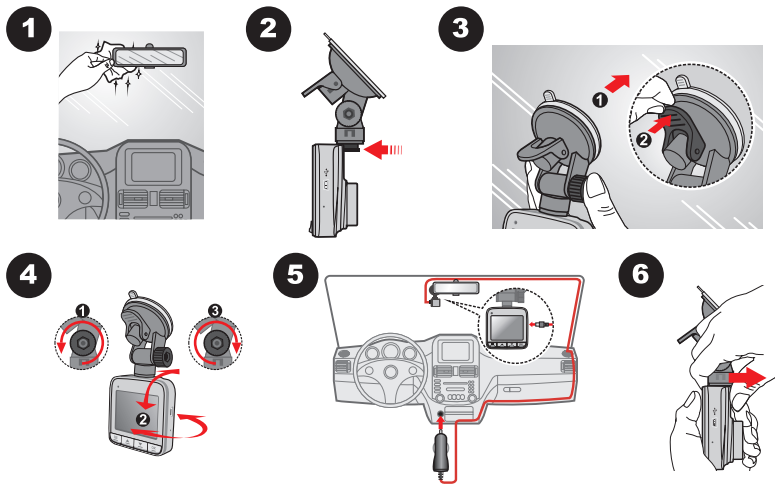

## Operating basics

**CAUTION:** DO NOT remove or insert the memory card while recording.




Connect the recorder to the car charger according to the installation instructions in the previous “Using your recorder in a vehicle” section.






---

## Setting the date and time

To make sure of the correct date and time for your recordings, please check the date and time settings before you begin recording.


1. When not recording, press  twice to open the **Setup** menu.
2. Select **Date/Time** and press .
3. Select **Set** and press .
4. Press the Power key repeatedly to change the setting fields.
  - Date format
  - Date fields
  - Time fields


Use  and  to select the desired setting and press .

 
## Recording in driving mode

### Continuous recording

When you connect the car charger to the cigarette lighter in the car, the recorder will start continuous recording automatically. The recording will be divided into video clips with about 130 MB for each clip; recording will not stop between video clips.

The recorder automatically stops and saves the recording when the vehicle engine is turned off. Then the recorder turns off automatically. If you want to stop recording manually, press .

When recording is not in progress, you can manually start the continuous recording at any time by pressing . To stop recording, press .

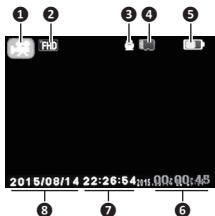


- |   |                        |   |   |
|---|------------------------|---|---|
| 1 | Current operation mode | 5 | Battery power status                                    |
| 2 | Image resolution       | 6 | Elapsed time of recording; remaining time for recording |
| 3 | Microphone status      | 7 | Current time  |
| 4 | Memory card status     | 8 | Current date  |

**Note:** If continuous recording is ongoing but there is not enough space on your memory card, new video clips will replace the old ones.

**Note:** When not recording, you can open the **Video** menu by pressing .

## Event recording


By default, if an event happens, such as sudden impact, high-speed driving, an overdone turn or an accidental crash, the G sensor will prompt the recorder to start an "emergency" recording (an event recording).

 
If you want to manually start an event recording while continuous recording is in progress, press .

To stop recording, press .

**Note:** Your MiVue will automatically protect/lock event recordings.

## Capture mode

When not recording, press the Power key briefly and repeatedly to switch to capture mode. Press  to capture a photo.

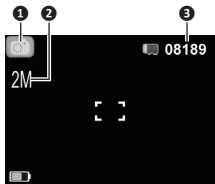




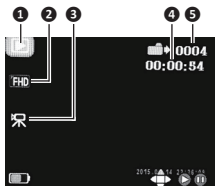 
- ① Current operation mode
- ② Image resolution
- ③ Remaining amount of photos

**Note:** In capture mode, you can open the **Capture** menu by pressing .

## Playback mode

To select a video or photo for playback (when not recording):

1. Press the Power key briefly and repeatedly to switch to playback mode. The screen will display the latest file.
2. Press  to play/pause the playback.
3. During playback, you can use / to switch to the previous/next file.



- ① Current operation mode
- ② Image resolution
- ③ Video
- ④ Video duration
- ⑤ Current file number














 
**Note:** In playback mode, you can open the **Playback** menu by pressing .

---

# File management

## Protecting files

You can protect files from being deleted.






 
1. When not recording, press the Power key briefly and repeatedly to switch to playback mode.
2. Press  to open the **Playback** menu.
3. Select **Protect** and press .
4. To add protection to the current file, select **One** and press . Select **Set** and press 
  - To add protection to all files, select **All** and press . Select **Set** and press .
  - To add protection to a certain file, select **Select** and press . Select the desired file and press .
5. A lock icon will appear on the playback screen.
5. To remove protection from the current file, select **One** and press . Select **No** and press 
  - To remove protection from all files, select **All** and press . Select **No** and press .
  - To remove protection from a certain file, select **Select** and press . Select the desired file and press .

---



## Deleting files

### CAUTION:

- Deleted files cannot be recovered. Make sure to back up your files before deletion.
- You cannot delete the protected files.

- When not recording, press the Power key briefly and repeatedly to switch to playback mode.
- Press  to open the **Playback** menu.
- Select **Delete** and press .
- To delete the current file, select **One** and press 
  - To delete all files, select **All** and press .
  - To delete a certain file, select **Select** and press . Select the desired file and press .

## Customising the settings

When not recording, press  to open the **Video/Capture/Playback** menu, or press  twice to open the **Setup** menu.

Menu	Item	Description
Video	Resolution	Sets the image resolution.
	REC Sound	Sets if you want to include sounds in the recordings.
	Time Stamp	Sets how you want to show the date and time in the recordings.

---

Menu	Item	Description
	<b>G-sensor</b>	Sets the sensitivity level of the G sensor, or disables the G sensor.
<b>Capture</b>	<b>Resolution</b>	Sets the image resolution.
	<b>Time Stamp</b>	Sets how you want to show the date and time in the photos.
<b>Playback</b>	<b>Delete</b>	Deletes file(s).
	<b>Protect</b>	Protects or removes the protection of the file(s).
	<b>Thumbnail</b>	Switches to the thumbnail view.
	<b>Volume</b>	Adjusts the volume level.
<b>Setup</b>	<b>Format</b>	Formats a memory card. (All data will be erased.)
	<b>Language</b>	Sets the language.
	<b>Sys. Reset</b>	Restores system settings to factory defaults.
	<b>Light Freq.</b>	Sets the frequency to match the flicker frequency of the local power supply when recording.
	<b>Date/Time</b>	Sets the system date and time.
	<b>LCD Timer</b>	Sets the timer for the LCD to turn off automatically (in the specified time) after recording starts.

---

## Caring for your device

Taking good care of your device will ensure trouble-free operation and reduce the risk of damage.

- Keep your device away from excessive moisture and extreme temperatures.
- Avoid exposing your device to direct sunlight or strong ultraviolet light for extended periods of time.
- Do not place anything on top of your device or drop objects on your device.
- Do not drop your device or subject it to severe shock.
- Do not subject your device to sudden and severe temperature changes. This could cause moisture condensation inside the unit, which could damage your device. In the event of moisture condensation, allow the device to dry out completely before use.
- The screen surface can easily be scratched. Avoid touching it with sharp objects. Non-adhesive generic screen protectors designed specifically for use on portable devices with LCD panels may be used to help protect the screen from minor scratches.
- Never clean your device with it powered on. Use a soft, lint-free cloth to wipe the screen and the exterior of your device.
- Do not use paper towels to clean the screen.
- Never attempt to disassemble, repair or make any modifications to your device. Disassembly, modification or any attempt at repair could cause damage to your device and even bodily injury or property damage and will void any warranty.
- Do not store or carry flammable liquids, gases or explosive materials in the

---

same compartment as your device, its parts or accessories.

- To discourage theft, do not leave the device and accessories in plain view in an unattended vehicle.
- Overheating may damage the device.

## Regulatory information

For regulatory identification purposes, MiVue C300 Series is assigned a model number of N526.

**CE**



Products with the CE marking comply with the Electromagnetic Compatibility Directive (2014/30/EU) - issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European Standards:

- EN 55022
- EN 61000-3-2
- EN 61000-3-3
- EN 55024
- IEC 61000-4-2
- IEC 61000-4-3
- IEC 61000-4-4
- IEC 61000-4-5
- IEC 61000-4-6
- IEC 61000-4-8



- 
- IEC 61000-4-11
  - IEC 60950-1

The manufacturer cannot be held responsible for modifications made by the User and the consequences thereof, which may alter the conformity of the product with the CE Marking.

## **WEEE**



This product must not be disposed of as normal household waste, in accordance with the EU directive for waste electrical and electronic equipment (WEEE – 2012/19/EU). Instead, it should be disposed of by returning it to the point of sale, or to a municipal recycling collection point.

## **Safety precautions**

### **About charging**

- Use only the charger supplied with your device. Use of another type of charger may result in malfunction and/or danger.
- This product is intended to be supplied by a LISTED Power Unit marked with “LPS”, “Limited Power Source” and output rated + 5 V dc / 1 A.
- Use a specified battery in the equipment.

### **About the charger**

- Do not use the charger in a high moisture environment. Never touch the charger when your hands or feet are wet.

- 
- Allow adequate ventilation around the charger when using it to operate the device or charge the battery. Do not cover the charger with paper or other objects that will reduce cooling. Do not use the charger while it is inside a carrying case.
  - Connect the charger to a proper power source. The voltage requirements are found on the product case and/or packaging.
  - Do not use the charger if the cord becomes damaged.
  - Do not attempt to service the unit. There are no serviceable parts inside. Replace the unit if it is damaged or exposed to excess moisture.

### **About the battery**

- Use a specified battery in the equipment.
- **CAUTION:** This unit contains a non-replaceable internal Lithium Ion battery. The battery can burst or explode, releasing hazardous chemicals. To reduce the risk of fire or burns, do not disassemble, crush, puncture, or dispose of in fire or water.
- Important instructions (for service personnel only)
  - Caution: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
  - Replace only with the same or equivalent type recommended by the manufacturer.
  - The battery must be recycled or disposed of properly.
  - Use the battery only in the specified equipment.

---

Revision: R00  
(11/2017)

### **Trademarks**

All brand and product names are trademarks or registered trademarks of their respective companies.

### **Disclaimer**

Specifications and documents are subject to change without notice. MiTAC does not warrant this document is error-free. MiTAC assumes no liability for damage incurred directly or indirectly from errors, omissions, or discrepancies between the device and the documents.

### **Notes**

Not all models are available in all regions.

Depending on the specific model purchased, the colour and look of your device and accessories may not exactly match the graphics shown in this document.

MiTAC Europe Ltd.  
Spectrum House, Beehive Ring Road,  
London Gatwick Airport, RH6 0LG,  
UNITED KINGDOM

**MiTAC Europe Ltd**  
**[www.mio.com](http://www.mio.com)**